
PART NUMBER 24685 REV. 1 Printed in U.S.A. Price \$1.00





Homelite Division of Textron Inc.

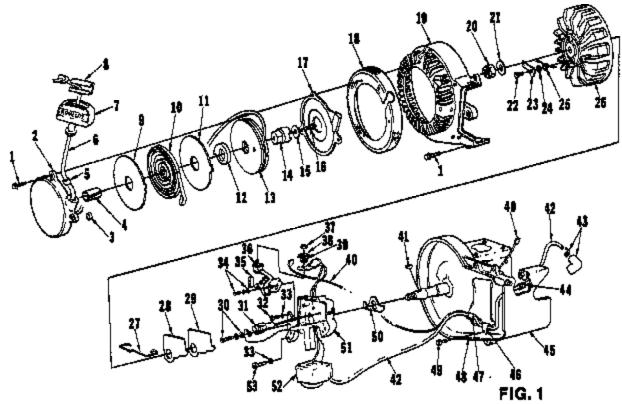




No.	Description	Parl No.	Qiy.	No.	Description	Parl No.	Qiy.
1	SCREW- Hex. 12-24 x 3/4	80867	7	25	ROTOR	64053-A	
2	COVER- Starter	A-84178-3A	1	27	CLAMP- Breaker box cover	55980	1
	Includes:			28	COVER- Breaker box	66979	1
3	BUSHING- Spring outer loop	65830	1	29	GASKET- Breeker box	55978-2	1
4	BUSHING- Starter poet	54443-1	1	30	SCREW GROUP- Condenser	57750	- 1
5	BUSHING- Starter rope	67177	1	31	CONDENSER- W/terminal	55967	1
ē	ROPE- Starler, 46" #5	A-93675	1	32	SCREW- Fil. 10-24 x 1/2	80595	1
•	Indiudes:			33	WASHER- Lock, #10	83046	3
	WASHER- (Not shown)	93862	1	34	SCREW GROUP- Point	67748	1
7	GRIP- Rope	A-69962-A	1	35	POINT SET	A-56155	1
•	includes:				inoludes:		
8	INSERT- Rope retaining	70018-A	T	36	WICK	55984	1
8 9	SHIELD- Spring (inner)	65711	1	37	NUT- Terminal	55982	1
10	SPRING- Rewind	64180-A	1	38	TAB- Ground	57733	1
11	SHIELD- Spring (outer)	65712	1	39	WASHER- Terminal	55983	1
12	LOCK- Rewind aprilog	64049-B	1	40	LEAD- Ground w/terminals	A-56321	1
13	PULLEY- Starler	64060-1	1	41	KEY- Rotor	75075	1
14	CUP- Statter	67139	1	42	LEAD- High tension	65382	1
15	WASHER- Retarring	55763	1	43	TERMINAL- Spark plug	A-65373-A	1
18	SCREW- Hex. 10-32 x 1/2	80648	1	44	GROMMET	68046	1
17	SHIELD- Bawdust	64052	1	45	SHIELD- Cylinder	A-63736-1	1
18	SCREEN- Fan housing	65390-2	1	46	CLAMP- Lend	56014	1
19	HOUSING- Fan	58094-1	1	47	SLEEVE- Insulating	55280	1
20	NUT- Lock, 7/16-20	61104	1	48	CRANKCASE- W/pin (See Fig. 2)	A-64532	1
21	WASHER- Fiel	84047	1	49	SCREW- Hex, 10-32 x 3/6	80889-1	1
22	STUD- Shoulder	84054-B	ź	50	SEAL- Breaker box	56292-A	1
23	PAWL- Starter	55756	2	51	BOX- Breaker w/core	57744	1
24	WASHER- Look, #12	70001	2	52	COIL- W/ground terminal	56988-A	1
26	SPRING- Starler pewi	65375-2	2	53	SCREW- Fil, 10-24 x 7/8	80660	ż

3

		5, 	XII / _ a / Ka			SUPER 1050 SUPER 1130G
	¥+	X	\mathcal{S}			1A Spark Arrentor requires 8 shim under esch
	TA	~		6		uu.
		, 11 11	,	L	\mathcal{Q}	. 9
.		900118 09845				Peri No
No. Desortpilan 1 CRANKCASE- Withink	Perl No. A-64532		; <u>ey</u> .	No.	CONNECTING BOD	A-69170 x x 1
1 CRANKCASE- Wiping Includes	A-04632	^ ^	'	41	Includes	
2 PIN- Dowel	74832	XK	- 2	80	SCREW- 10-32 × 5/8	80346 × × 2 59806 × × ī
3 STUD 4 BEAL	72787-1 58306-8	X X X X	4	81 132	BEARING- Needle WASHER- Thrust	66719 X X 2
5 8CREW- Hex, 12-24 x 3/4	50557	ŶŔ	ġ.	33	PISTON & PIN	A-69189-A x x 1
SCREW- Hex. 12-24 x 3/4	50567	×	4		Includes	
5 BRACKET- Handle bar 7 SCREW- Hex, 12-24 x 7/8	59635-2 60891	ĸ	1	34 35	PISTON RING AING- Returning	66281 × × 2 64743 × × 2
E CAP- Fuel tank	A-55741-A	* *	i	36		63102-1 X × 1
Includes				37	BCREW- Hex, 12-24 x 3/8	60837 × × 2
B GASKET	85358	XX		56	CAP- Muttler CAP- Muttler	A-59953-2 × 1 A-54484-2 × 1
VALVE- Vani (Not shown) 10 LABEL- Warning	09451 09847	* *		39	STUD- Muffler	59962-B X K 2
11 TANK- Fuel W/screen	A-67739	Ĩ			BAFFLE- Muffler	59878-A X T
includes.	82145	-		44	BAFFLE- Muttler BCREW- Hex, 1/4-20 x 5/8	59976-1 × 1 60402 × × 1
12 SCREW- Fit, 8-32 x 5/8 13 COVER- Fuel tank	59667-3	X	11		BODY- Muffler	A-59927-2 x x 1
14 GASKET- Fuel tank	67677	×			SPARK PLUG	63547-6 × × 1
15 FLEXIBLE LINE	55605	X X			Includes GASKET	25038 X K 1
16 FILTER ASSEMBLY Includes	A-59251	* *	1	44	CAP- Spark plug	63738-A × × 1
17 FILTER	69253-1	<i>x</i> x	1	46	CYLINDER SHIELD	A-63736-1 X X 1
16 "O" RING	87900	X			SCREW- Hex, 10-24 × 3/8 NUT- Hex 5/16-24	° 80889×1 кк 2 254(2 кх 4
19 GABKÉT 20 Fitting-Fuel	63175-1 63132	X	-		WASHER- Tab lock	05367-1 x x 1
21 RING- Relaining	58319-A	X X	1		CYLINDER	A-59712-A x x 1
22 BEARING- Sall	58190-9	××	-	- /		84453 X X 1
23 WASHER- Lock 24 SCREW- Beating relaining	83061 19238-3	K X K X		51 62	GASKET SLEEVE- Insulating	56290 × × 1
25 ROLLERS- Set of 31	A-69082	x x	1	63	WASHER- Lock, 6/18	63002 × × 3
26 CRANKSHAFT	A-64088	ĸ	1		FITTING- Fuel outlet	58364 z 1 58172-4 z 1
CRANKSHAFT 27 gasket	A-54351 63356	х х к			TANK- fuel GASKET- Fuel tank cover	58367 X 1
28 KEY- Woodruif	76078	xx		57	COVER- Fuel tank	59920-2 x 1
* Denotee new parts					SCREW- Rd , 6 x 1/2	80613 x B
ALWAYS FURNISH MODEL AND SERI	AL NUMBER				AGCESSORIES (Not shown) SPARK ARRESTOR (See Note)	A-63518-1A x x 1
WHEN OUTBOING BARTS						3

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS **SUPER 1050**

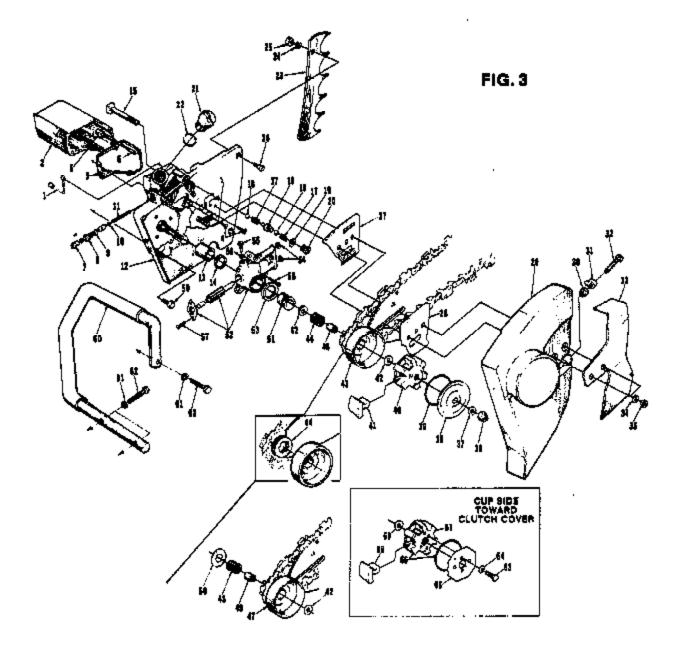


SUPER 1050

No.	Gescription	Peri No.	Ċty.	Ne.	Description	Part No.	Qty.
1	LINE- Oil pickup	A-64010	1	39	SPRING- (5/8" clutch)	6744 î	2
2	RESERVOIR- Oil	A-56341-A	1	40	SPICER- (6/8" clutch) (Note 1)	66646-2A	
-	Includes			41	SHOE- Clu(ch (5/8" olutch)	88754-18	
3	GASKET- Reservoir	67122	1	42	WASHER- Thrust (6/8" clutch)	56132	2
- Ā	SCREW- Fil, 8-32 x 3/4	62156		43	DRUM & HUB- (Rim type)	A-85991	1
•	PIN- Cotter (Not shown)	56301	1		DRUM & HUB	A-88727-A	1
5	FILTER- OIL	A-84283	1	44	SPROCKET- 404 pilch, 8 tooth	5596D	۱
ě	LINE- OII pickup	59574	1		SPROCKET- 1/2" pitch, 5 looth	57017	1
ž	CONNECTOR- Pump	56837-A	1	45	RACE- Inner	65348	1
é	PLUNGER- OI pickup	A-57834-10		46	BEARING- Needle caged	86393	i
	Includes:		•	47	SPROCKET & DRUM (open type) (Note 2)		`
8	"O" RING- Shaft	59074	1	•/	404 pilok, 8 tooth	A-57341	1
		74386	i			A-56299	i
10	"O" RING- Plunger	59293	ł		7/16" prtch, 7 100(h	A-58615	i
11	SPRING- Plunger		1		t/2" prich, 7 toeth	A-00010	
12	DRIVECASE	A-84264-8			includes		
	Includes:			48	BEARING- Needle (Note 2)	56230	1
	TUBE- Oil line (Not shown)	68023	1	49	RACE- (nner (Note 2)	68231	1
13	BEARING- Needle	63043	1	50	WASHER- Thrust (Note 2)	66236	1
14	SEAL	56236-D	1	61	WORM- Gear	83893	1
15	BCLT- Guide bar	58334-A	2	52	PUMP- Automatic oil (ehort stroke)	A-54073-A	t
15	BALL- Check	25527	2		PUMP- Automatic oil (long stroke)	A-67579	1
17	SPRING	59022	2		Includes		
18	SEAT- Valve	A-87969	1	53	SEAL- Fell	59926	۱
18	GASKET	67123	1	54	"O" RING	69074	2
20	CAP- Check valve	57958	1	55	SCREW- Cam	64102-A	t
21	CAP- OI	A-83717-C	1	55	GASKET	59736	1
• •	Includes			67	SCREW-Pan hd , (4-40 x 1/4)	80919	2
	VALVE- Check (Not shown)	69451	1		PLUG- [Not shown]	59772	ĩ
22	GASKET	55807	1	58	SCREW- Hex, 8-32 x 1/2	80560	3
23	KIT- Spiked bumper (Long spikes)	69275	i	59	SCREW- Hex, 12-24 x 3/4	80587	Б
4.5	BUMPER- (Short) (Not shown)	A-58643	i	80	MANDLE BAR- Flush cut	A-99174	ĩ
	Includes	A-00040	•		HANDLE BAR- Wrap Bround	A-58388-A	i
		83009	2			N-90300-N	
24	WASHER- Lock, 1/4	61053	2		(Not shown)	A-59922	1
26	NUT- Hex, 1/4-20				HANDLE BAR- Wrap sround	W-08955	
26	SCREW- Flat, 1/4-20 x 3/4	80053	2		(Not shown (Note 3)		
27	PLATE- Guide ber (inner)	67669-A	1		HANDLE BAR- Reversible bow	A-64727	ĩ
28	PLATE- Guide bar (outer)	67670-A	1		(Not shown) (Note 4)		-
29	COVER- Drivecase	A-84074-4	1	61	WASHER- Look, 5/16	63003	a.
	includes			62	SCREW- Hex, 5/15-15 × 1-1/2	80087	3
30	NUT- 6/18-18	B1236	1		KIT- Clutch (Note 1)	A-94744	٦
31	PfN- Adjusting	56613-1	1		Includes		
32	SCREW- 5/16-18 x 2-1/8	62219	1	63	SCREW- (3/4" Clutch)	60351-2	2
33	GUARD- Chain (Note 1)	54029-2	1	64	WASHER- (3/4" Clutch)	12021	۱
34	WASHER- Fiat, 3/8	54099	2	85	COVER- 18/4" Clutch1	A-24921+A	1
36	NUT- Hex 3/8-16	51089-2	2	68	SPRING- (3/4" Clutch)	93289	2
36	NUT- Hex, 3/8-24 (6/8" cluich)	81182	ī	67	SPIDER- (3/4" Ciulch)	93288-1	Ī
37	WASHER- Flat (5/8" clutch)	54027	i	65	SHOE- (3/4" Clutch)	83281-1	6
38	COVER- (5/8" clutch)	68238-A	i i	68	WABHER- Thrust (3/4 Clutch)	94743	1
	CEBSORY (NOT SHOWN) T- Drivecese cover (extended) Includes	A-87511		NOTE	 3/4" (hickness clutch was used from i 6/0" Lhickness clutch spider used be 8289 will be discontinued when supp Thereafter, convert to 3/4" thickness A-84744 which includes items 63 thro 	alaw lat num aly is extention a clutch with	iber led
	COVER- Driveose PLATE- Guard HAND1E BAR- Wrap around and items #30, 31, and 32	67213-2 1 67399-1 1 A-69206 1			2 When using open type sprockets in items 48, 49 and 50 must also be use	٥	
				NOTE	3 A-59922 Handle Bar requires a 64029	-2 Chain Gui	∎rđ

NOTE 4 A-84727 Handle Bar requires a 80856 screw

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS

SUPER 1130G

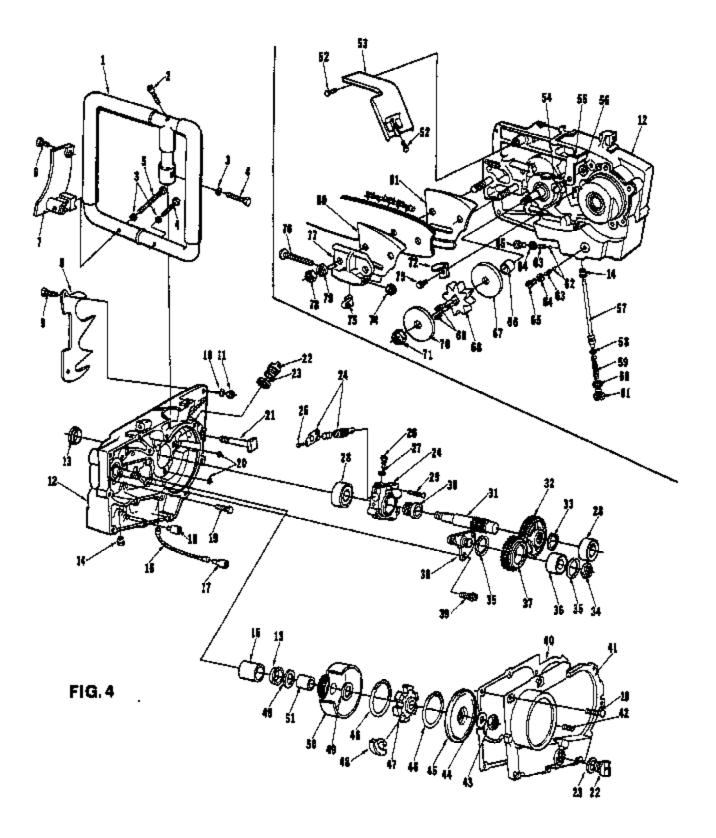


SUPER 1130G

No.	Description	Part No.	City.	No.	Desc
•1	HANDLE BAR	A-89268	1	39	SCRE
	HANDLE BAR- Wrep around	A-63136	1	40	GAS
	Includes			41	COVE
2	SCREW- Soc, 5/16-18 x 1	80308	1	42	PLUG
3	WASHER- Lock, 5/15	83003	9	43	NUT-
4	SCREW- Hex, 5/18-16 x 1-1/2	80087	2	44 45	WAS
5	SCREW- Hex, 5/16-16 × 3-1/4	80898	1	40	COV8 SPRII
6	SCREW- Hex, 12-24 x 7/8	50891		47	SPID
7	BRACKET- Handle bar	59635-2	t 1	48	SHOR
8	KIT- Spiked bumper (long spikes)	A-83413		49	WAS
	includes	80181-3	•	50	DRU
.9	SCREW- Hex, 1/4-20 x 7/8	8300	2	51	BEAP
10 11	WASHER- Lock, 1/4 NUT- 1/4-20	81053	2	62	SCRE
11	KIT- Spiked buttoer (Not shown)		•	63	GUA
	short spikes	A-83138	1	~	
		A-03100			Ë
	SCREW- Hex, 1/4-20 x 8/4	80218-1	2		Ē
	WASHER- Look, 1/4	63009	2	54	BCRE
	NUT- 1/4-20	61083	2	66	BELL
12	HOUSING- Gear	A-63396-C	ĩ	55	WAS
	Includes		`	57	PLUN
13	SEAL	56256-8	2		tr.
14	BUSHING- Rod	59054	ī	55	"
	ELBOW- (Not shown)	59532	ť	59	SPRI
15	BEARING	76167-5	ŕ	60	WASI
18	LINE- OIL	59674	1	61	CAP-
17	FILTER- Oil (automatic)	A-64293	1	62	BALL
18	PILTER- Oil (menual)	A-63118	1	63	SPAI
18	SCREW- Hex, 12-24 x 3/4	80667	17	64	GASI
20	"O" RING	58074	2	65	CAP-
21	BOLT- Guide ber	55334	2	86	SPAC
22	CAP+ Filler (oil)	A-63717-C	2	87	WAB
	includes per cap			68	SPRC
	VALVE- Check (Not shown)	05451	1		SPRO
	GASKET	68807	1	69	KEY-
24	PUMP- Automatic oil	A-63092	1	70	WASI
	includes			71	NUT-
25	SCREW- Pan. 4-40 x 1/4	60919	2	72	BRAD
26	SCREW- Cam	64102-A	1	73	SCRE
27	GASKET	69736	1		PLAT
25	BEARING- Ball	63107-S	2	74	N
29	5CREW- Hex, 8-82 x 7/8	80568	3	76	P
30	WORM- Gear	83084-A	1	76	5
31	SHAFT- Sprockel	59277-A	1	77	P
32	GEAR- Driven, 3 f ratio, 64 teath	56276-1	1	78	NUT-
-	GEAR- Driven, 2 T ratio, 42 testh	59298-1	1	78	WASH
33	RING- Retaining	63108 57788-6	1	80	PLAT
34	NUT- Idler geer	57768-A 25922	2	81	PLAT
25	RING- Retaining	72328-5	1		C LOT
38 37	BEARING- Ball	59250	4		
36	GEAR- Idler POST- Idler gear	59258-1A	-		' Den
40	ervar- iniei Aeei	00200-1A			

No.	Description	Pert No.	ûty,
39	SCREW- Hex, 1/4-20 x 3/4	63407	3
40	GASKET	63124	1
41	COVER- Gear housing	59631-4	1
42	PLUG- Pipe	26097	1
43	NUT- Hex, 3/8-24	81192	1
44	WASHER	66/338	1
45	COVER- Clutch	56023-A	1
46	SPRING- Clutch	67441	2
47	SPIDER- Clutch	58547-3A	1
48	SHOE- Clutch	A-67519	8
49	WASHER- Thrust	66132	2
50	DRUM- Clutch w/gear	A-63123	ī
51	BEARING- Bleeve	69903	1
62	SCREW- Hex. 12-24 x 3/8	80837	ġ
63	GUARD- Chain	A-63776	ĩ
66		A-631 / 6	
	Includes		
	DEFLECTOR-Sawdust (Not shown)		1
	RIVET- (Not abown)	65126	3
-	SCREW- Pivol	6969 1	1
66	BELL CRANK	59592	1
56	WASHER- Thrust	63109	1
57	PLUNGER- Orl pump	A-63112	ſ
	Inciudea		
58	"O" RING	74388	1
58	SPRING- Compression	69293	1
60	WASHER	58195	1
61	CAP- Oil pump	63115	1
62	BALL- Check	25527	2
63	SPRING- Check valve	59022	ā
64	GASKET- Check valve cap	85144	2 2 2
65	CAP- Check valve	65 (48	5
66	SPACER- Sprocket	59697	ī
87	WASHER- Sprocket (inner)	56074	÷
68	SPROCKET- 1/2" pilch, 8 tooth	55593-3	1
		70353	i
	SPROCKET- 404 pitch, 8 looth		
69	KEY- Sprocket	58076-1A	2
70	WASHER- Sprocket (outer)	56077	1
71	NUT- Hex. 1/2-20	81101	1
72	BRACKET- Rod	63110	1
73	SCREW- Hex, 10-24 x 3/8	80889-1	1
	PLATE- Adjusting	A-55591	1
	Includes		
74	NUT- Hex lock	81235	1
76	PIN- Guide bar edjusting	55552-1	1
76	SCREW- Rd , 5/16-18 x 2-1/8	82219	1
77	PLATE	66561-2	1
78	NUT- Hex, 3/8-16	61089-2	2
78	WASHER- Lock 3/6	83018	2
80	PLATE- Guide bar (outer)	58957-B	2
81	PLATE- Guide bar (enner)	58958-A	1
		24499-FK	•
	' Denotes new parts		

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

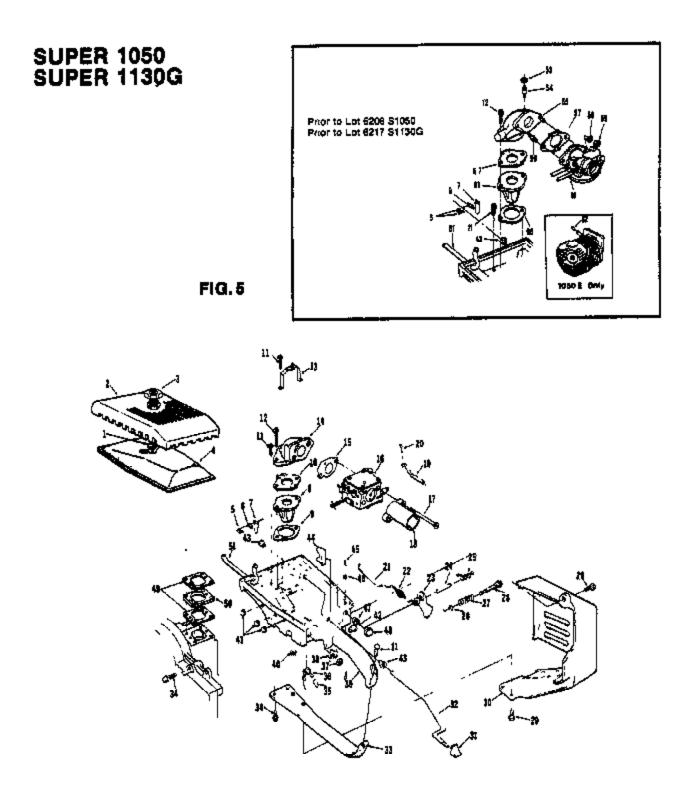

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS


SUPER 1050 SUPER 1130G

No.	Description	Pert No.	Qty.	No.	Description	Part No.	Qly
1	BING- Retaining	58319-A	1	33	BRACE- Throttle handle	68186-A1	1
2	COVER- Air filter	69230-1	1	34	SCREW- Hex hd , 12-24 x 3/4	80867	3
3	NUT- Cover	A-70326	1	35	SLEEVE- Grounding switch	69092	1
Ā.	FILTER ELEMENT- AI	A-68306	1	36	6WITCH- Toggle	A-57650-3A	1
5	SCREW- Pan hd . 4-40 x 3/16	80658	а		Includee"		
ě	CLAMP- Reed	69629	4	37	NUT	72084-A1	1
7	REED- Valve	59628	4	38	PLATE- ("RUN-STOP")	70638	1
ġ.	SEAT- Reed valve	59627-2	1	39	HANDLE- Throttle (carb chambar)	A-63665	1
5	GASKET- Spacer-adapter	85946-1	1		Includes'		
1D	GASKET- Carburetor	63655-A	1	40	PLUG- Button w/69766		
11	SCREW- Hex hd., 12-24 x 1	80664	5		"O" Ring	A-89514	٦
12	SCREW- Hex hd., 1/4-20 x 1-1/2	80882	2	41	PLUG- Button w/59785		
13	BRACKET & STUD	A-70405	Ī		"O" Ring	A-64744	3
14	MANIFOLD- Inteke	A-70387-1	1	42	BUSHING- Nylon	59064	1
16	GASKET- Carburator	59722-2	1	43	BUSHING- Nylon	68929	2
18	CARBURETOR (SDC-74)	A-70802-A	1	44	STOP- OII pump rod	55930	1
17	SCREW- Hex mech , 10-32 x 2 25	80245	2	46	PIN- Cotter	66301	1
18	TUBE- Sprtback	70389-1	1	46	FELT	63290	1
18	ROD- Choke (Note 1)	A-70404	1	47	GROMMET	58362	1
20	PIN- Cotter	88324	1	48	BUTTON- Red	57258-1	1
21	ROD- Throttle (Note 2)	70398	1	49	GA6KET- Specer	55343	2
22	BOOT- Throttle rod	58348	1	5Ó	SPACER	68391	1
23	TRIGGER- Throtlin	55161-A	1	61	TUBING- Rubber (lusi line) (Note 3)	70308-24	1
24	SHAFT- Throitie trigger	58363	1	52	PLUG- Cylinder tube (S 1050E only)	70551	T
26	SPRING- Throttle trigger	68362-A	ť	63	GASKET - Stud	58392	1
26	RING- Retaining	58408	i	64	STUD- Cover	58261	ſ
27	SPRING- Throttle Intch	58406	ĩ	55	MANIFOLD- Intake	58153-2	1
28	PIN- Throttle latch	58404	Ĩ	56	STUD- Carburator	27464	2
29	SCREW- Hex hd 12-24 x 5/8	60576	3	67	GASKET- Carburstor	63655-A	2
30	SHIELD- Multier	63733-2A	Ĩ	58	WASHER- Lock 1/4"	53009	2
31	BUTTON- OIL rod	58357	1	59	NUT- Hex, 1/4-20	\$1013	2
32	ROD- Oll pump(\$1050 AO)	55356-8	1	60	GASKET- Spacer adapter	96948	1
-	ROD- Qi) pump (\$1130G]	63127-A	1	ē1	SEAT- Read valve	58627-1	1


- NOTE1 Use part #A-58354 prior to lot 8205 on S1050 and lot 6217 on S11300
- NOTE 2 Use part #59338-A prior to fot 6265 on \$1050 and lot 6217 on \$11306
- NOTE3 Use part #70308-21 prior to lot 6206 on \$1050 and lot 6217 on \$11300

SUPER 1050 SUPER 1130G

FIG. 6

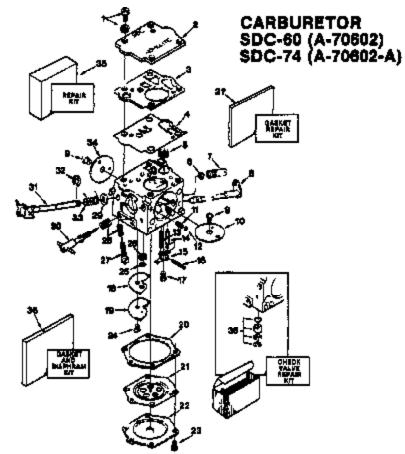

No.	Description	Part No.	Qly.	Np.	Description	Part No.	Qty.
1	SCREW- Pump cover	64694	4	25	RING- Screen retaining	87380	1
2	COVER- Fuel pump	67002	1	26	SCREEN- Check valve	67381	1
3	GASKET- Pump	167006	1	27	SCREW- Idle adjustment	70674	1
÷ 4	DIAPHRAGM- Pump	164233	1	+28	5PRING- Needle adjustment	84236	2
f 5	SCREEN- Inlet	64243	1	29	WABHER- Nylon	70734	1
. <u>.</u>	WASHER- Check valve	70876	1	130	NEEDLE ABŠEMBLY- Idio	70675	1
*	KIT- Governor check velve	93815	1	31	BHAFT ASSEMBLY- Throtile	70559	1
8	SHAFT ASSEMBLY- Choke	67108	1	32	RING- Retaining	70688	1
† 9	SCREW- VEIVE	64693	2	+33	SPRING- Throtile return	67006	1
10	VALVE- Choke	64225	τ	34	VALVE- Throttle	70570	1
111	SPRING- Choke motion	64238	ĩ	35	KIT- Repair (SDC-60)	70879	1
112	BALL- Choke friction	80051	1		KIT- Repair (SDC-74)	94877	1
÷13	SPRING- Metering lever (SDC-50)	64237	1	36		83005	1
	SPRING- Metering lever (SDC-74)	70061	1		KIT- Gesket & diaphragm (9DC-74)	94876	1
114	VALVE- Iniet needle	64229	1	+37	GARKET SET	70878	1
†16	LEVER- Metening	64245	1	38	KIT- Check valve	65386	1
116	PIN- Metering lever	64244	1		includes		
+17	SCREW- Metering lever pm	64668	1		VALVE- Check		1
16	GASKET- Circuit plate	±68781	٦		SEAT- Valve		٦
19	PLATE- Circuit (SOC-60)	70677	1		SCREEN- Check valve (item 25)	67381	1
-	PLATE- Circuit (BDC-74)	64674	٦		RING- Screen retaining (item 25)	67360	1
20	GASKET- Metering	164231	1	39	FITTING- inlet albow	69365	1
+21	DIAPHRAGM ASSEMBLY- Metering	264235	1				
22	COVER- Metering disphragm	70680	ť		t Contents of Repair Kit		
23	SCREW ASSEMBLY	04088	4		± Contents of Gaskel & Disphragm Kit		
24	SCREW- Circuit plate (SDC-50)	12840	1		é contraine el citakor a prapringen en		
	SCREW- Circuit plate (SDC-74)	70082	1				

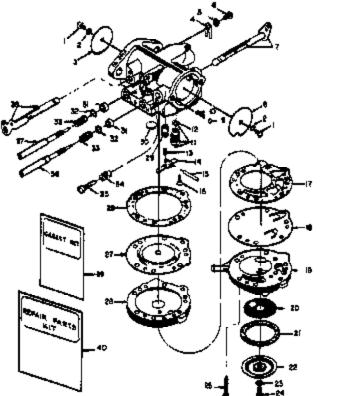

SUPER 1050 SUPER 1130G

A-69276 HL-294-A

FIG. 7

Rd hd,4~40 x 1/4 - Lock	160591	Qiy.
lest		2
	+83008-1	2
A- Throttie		Ŧ
rottle shaft		ŕ
- Lock, #5		1
Finthd . 8-32 x 5/16		i
LEVER- Choke		ì
1- Choke		ŕ
eck, 5/32" diameter		ż
Choke friction		ĩ
& SEAT		÷
Inist seat		-i -
Control lever		Ť
liet control		ì
100		i
Fuistum out reterning		1
Pump disphrapm		-i -
GM-Fuel oump		
Fuel inlet		:
Pump streener		
Trainer		-
	A Chock A Throttis Tottle shaft - Lock, #8 Fist hd , 8-32 x 5/18 LEVER- Choke 3- Choke neck, 5/32" dismeter Choke Inclion & SEAT Inlet seat Control lever Inlet control Control lever Net control Pump disphragm GM-Fuel pump Fuel night Pump sträiner Sträiner	A- Throttlin 64623 rottle shaft 73066 - Lock, #8 83000 Flat hd, 8-32 x 5/16 73086 LEVER-Choke A-54827 3- Choke A-Choke A-54827 3- Choke A-Choke A-54827 3- Choke A-SAT A-84828 Inlet seat 55344 Control lever 165503 Nifet seat 55344 Control lever 165503 Net control 135747 rum 184822 Pulszum pun reterning 158922 Pump disphragm 58529 GM-Fuel pump 157728 Iel pump 59265 Fuel injet 156527 Pump strener 5551

No.	Description	Part No.	City.
23	GASKET- Strainer cover screw	26098	
24	SCREW- Pump cover	158625	- i
25	SCREW- Body w/lock wesher	65316	6
26	COVER- Main diaphragm	A-58533	1
27	DIAPHRAGM- Mein control	+57529	Ť
28	GASKET- Cover draphragm	57824	Ŷ
28	NOZZLE- Main	A-77429	i
30	PLUG- Expansion	130818	1
31	PACKING- Adjusting ecrew	75733	ż
32	WASHER- Adjusting screw	76736	2
33	SPRING- Adjusting needle	173076	ã
34	SPRING- Throttle stop	+28054	ī
35	SCREW- Idle stop	171509	ì
36	NEEDLE- Adjusting (main mixture)	85604	i
\$7	VALVE- Needle (idle mixture)	55680	i
38	SHAFT & LEVER- Throttle	A-64625	÷
39	GASKET & PACKING SET	+68667	÷.
40	REPAIR PARTS KIT	68663	4
	GASKET & DIAPHRAGM SET	63590	'

f Indicates contents of Repair Parts Kit

TOOLS	
COLLAR- Main bearing install.	22620-2
JACKSCREW- Magnelo	A-23672
includes:	
WASHER (1)	64035
PLATE- Crenkehaft eligning	23670
PLATE- Sprockel looking (Super 1130G Auto)	22760
PLIERS- Retaining ring (piston)	22825
PLUG- Bearing Install. (Super 1130G Auto)	23381-3
PLUG- Bearing Install. (Super 1130G Auto)	23226
PLUG- Bearing install. (conn. rod)	23874
PLUG- Searing and seal install. (Super 1130G Auto)	23913
PLUG- Bearing Install, (clutch) (Super 1060 Auto)	23420
PLUG- Bearing Install., (drivecale) (Super 1050 Auto)	23676
PLUG- Seal Install, (crankcase)	23233-1
PLUG- See Install. (deathousing)	23671
PULLER- Magento rotor	A-24028
Includes:	
SCREW (2)	80450
NUT (2)	81208
SLEEVE- Bearing and shalt install.	23136-2
SLEEVE- See protecting	23563
WRENCH- Combination	A-23937-8
WRENCH- Socket screw (conn. rod)	23528
WRENCH- Spanner	A-23898-A
includes:	
PIN (2)	23717-A
SCREWORIVER	24541.
WRENCH SOCKET	86851
WRENCH- Spenner (Super 1060 Auto)	A-93791
ACCESSORIES	
DECAL- (universal replacement) composed of "Direct Drive".	
"Geer Orive", "Starting Instructions" and two "HOMELITE"	
(letters 1/4" and 1/2" high).	23742-A
HANDLE- Helper (Super 1180G Auto)	A-87757
includes:	
NUT-Tee (1)	67700
PLUG- Shoulder (2)	67759
KNOB- Helper handle (1)	A-97763
LOCTITE	23488-B
OIL- Gear (1 pl. container) Super 1130G Auto	55291-C

PAINT

PAINT- Black (sprey can)	23772
PAINT- Red (sprey can)	23475

57084-1

OIL- Gear (1 pl. container) Super 1130G Auto REEL- 260' Starter Rope #5

HEADQUARTERS

HOMELITE DIVISION OF TEXTRON INC. P.O. BOX 7047 14401 CAROWINDS BOULEVARD CHARLOTTE, N.C. 20241