
PARTS LIST

HOMELITE[®] Chain saw



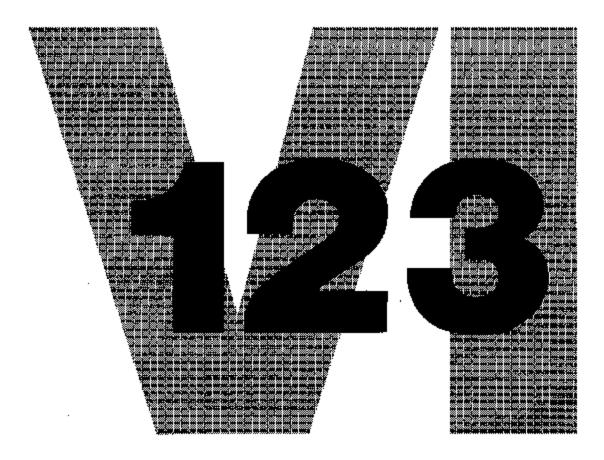


THUS

HOMELITE DIVISION OF TEXTRON INC. 14401 Carowinds Boulevard Charlotte, N.C. 28217



Homelite Division of Textron Inc.

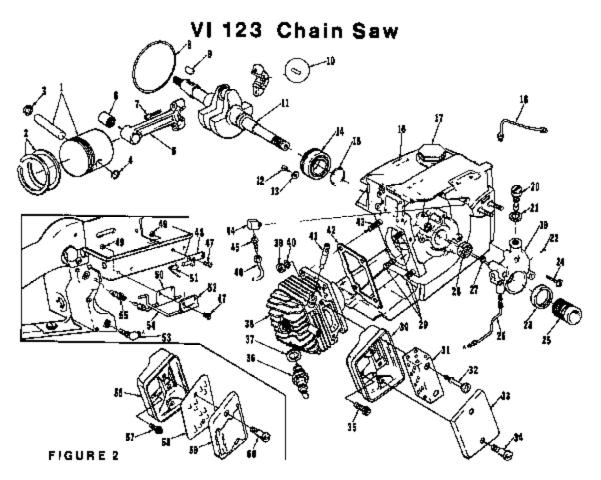

No.	Description	Part No.	Qty.	No.	Description	Part No.	Qty.
1	PISTON & PIN Includes:	A-68436	1	*	MUFFLER (complete) Incodes	A-69232	1
2	PIETON RING	59436	2	•30	BODY-muffler	A-60231-1	1
8	RING-retaining	75120	1	•31	BAFFLE-muffler	88230-1	1
4	RING-piston pin retaining	64BI3	J	32	SCREW-shoulder	68481	2
5	ROD-connecting	A-68498	1	* 33	CAP-muffler	69226-1	1
	Includers			34	SCREW-shoulder	64133-A	2
в	BEARING-peedla	67409	í	35	SCREW-hex, 12-24 x 1/2	80831	1
2	SCREW	80541	2	346	SPARK PLUQ	83547-8	1
	"O" RING	56766	I	27	Includes GASKET	26036	1
9	KEY-Woodruff	75078	í	*38	CYLINDER	A-85795-1A	I
+10	ROLLER-needle (set of 25)	A-69050	1	39	NUT-box, 1/4-28	81066-2	4
11	CRANKSHAFT	68730	1	40	WASHER-lock, 1/4	83000	4
12	SCREW-bearing retainer	50704	2	41	PIN-compression release	<u>A</u> -87482	1
19	WASHER-special	63905	2	42	GASKET-cylipder	65820	1
16	BEARING-ball	62865-8	1	48	STUD-cylinder (long)	63668	1
15	RING-retaining	58319-A	1	44	CONNECTOR-slbow	01734	1
16	DECAL	64144	1	45	FITTING-straight	00506	1
17	CAP-fuel filler	A-65283-B	1	46	LINE-oil (menual)	A-67070	1
18	LDSE- oil (auto, upper)	A-63010	1	47	SCREW-pap, 6-32 x 8/8	80571	•
IĐ	PUMP-automatic of	A~67023	1	46	PIVOT PIN & BRACKET	A-84858-2	1
•••	Includes:			49	NUT-flaxlock, 6-32	81126	4
20	SCREW-cam	64102-A	1	50	CLAMP-oil	66949-2	1
21	GASKET	59796	í	51	SPRING-relief valve	64658	1
22	SCREW-pan, 4-40 x 1/4	80919	2	52	CLAMP-lever	64855-2	1
23	SEAL-feit	64393	1	53	FILTER-oli	A-64741	1
24	SCREW-pan, 8-32 x 7/8	80568	8	Б4	LEVER-reltef valve	64854-B	1
25	WORM-oil pump	63228	1	66	VALVB-check	A-65948	3
28	LINE-oil (auto, lower)	A-63947	1		MUFFLER (complete)	A-68963	1
27	"O'RING	59074	1		moludes:		
28	SEAL	58306-A	1	58	BODY-mulfler	ŕA-64130-2	1
29	STUD-cylinder (short)	55871	3	67	SCREW-hex, 12-24 x 1/2	t 60821	з
				56	BAFFLE-muffler	t 68472	1
				59	CAP-muffler	+ A-68951-1	1
	* Denotes new parts	f Optional		60	SCREW-shoulder	†64138−A	1

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS

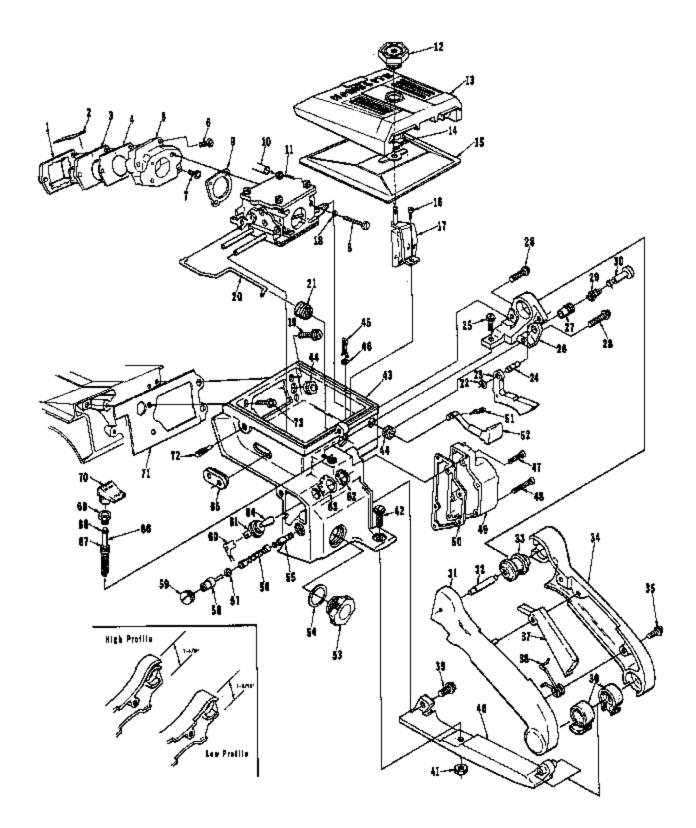


FIGURE 3

No.	Description	Part No.	Qty.	No.	Description	Part No.	Qty.
1	RETAINER-read valve	64253-A	I	*38	SPRING-trigger	68681	3
z	REED-valve	69678-B	4	39	SCREW-bex, 12-24 x 1-1/4	80994	I
â	SEAT-reed valve	84252-A	1	\$ 40	BASE-bandle	A-69085-1	1
4	GASKET-reed valve seat	64269	1	•41	NUT-hez, 12-24	81225	1
5		A-67602-A	ī	42	SCREW-pan 12-24 x 5/8	80707	1
, v	Includes:		-	*43	CARBURETOR CHAMBER	A-69163	1
6	SCREW-pan, 8-32 x 1-1/4	82174	3		Includes:		
7	SCREW-pan, 8-32 x 1	82173	1	44	GROMMET	64862	2
ė	SCREW-hex, 10-32 x 1-7/8	82170	2	46	PIN-cotter	86301	1
9	GASKET-carburetor	67631	1	48	WASHER-felt	83280	1
10	LINE-fuel	68544	1	47	SCREW-fil, 8-92 x 3/4	82150	3
11	CARBURETOR (SDC-31)	A-68602	1	48	SCREW-fil, 8-32 x 1-5/8	82153	3
12		A-87827	1	49	COVER-oil tank	A-68120	1
*13	COVER-sir filter	63189-6	1		Includes:		
14	RING-retaining	58318-A	1		PLUG-pipe (not shown)	56671	1
15		A-63956-A	1	50	GASKET-oil tank	67265	1
16	SCREW-hex, 12-24 x 1/2	80821	1	51	PIN-ootter	86324	I
17		A-66056	1	52	ROD-choke	67000-1	1
18	WASHER-lock, #10	83046	2	53	CAP-oil (vented)	A-65284-A	1
10	SCREW-hez, 12-24 x 7/8	80891	1		Includes		
*20	ROD-firottis	69084	1	54	"O" RING	85133	1
21	BOOT-throttle rod	67684	1		VALVE-yeat (not shown)	63718	1
422	RING-retaining	69071	1	55	FILTER-01 (manual)	A-64293	3
*28	TRIOCER-throttle	83212-1	1	58	LINE-flexible oil	64,358	1
*24	PIN-trigger	09069-1	1	57	GASKET	50736	1
25	SCREW-pao, 10-32 x 1/2	80825	1	58	FITTING-check valve	A-63830	1
*28		A-88160	1	59	SCREW-set	68113	1
27	Includes: BUSHING-nylon	64646	1	60	LEAD-ground	A-63939	1
28	BCREW-pag, 10-32 x 5/8	80572	2	61	SWITCH	A-63938	1
2.0	SPRING-throttle latch	84877	1	62	Includes: NUT	72084-AI	1
30	PIN-throttle latch	65592-A	1	63	PLATE-"on-off"	63910	1
#31	HANDLE-throttle (left high profile)		1	*64	SLEEVE-grounding switch	69092	1
•	HANDLE-throttle(left, low profile)		1	66	GROMMET-"h1-lo"	58858	1
*32	PIN-vibration isolator	66999	1	66	PLUNGER-oil pump	A-08001-A	1
*38	ISOLATOR	88929	1	67	Includes: "O' RING	58408	1
*34	HANDLE-thrafile (right, high profile		ĩ	68	"O' RING	69074	1
	HANDLE-throttle (right, low profile)		ī	69	NUT-plunger	65082	1
*35	SCREW-pan, 8-32 x 5/8	80582	â	70	BUTTON-oil pump	67389	1
*38	ISOLA TOR	68325	2	71	GASKET-carburctor chamber	64201	1
¢37	TRIGGER-throttle latah	68682	ĩ	72	SCREW-idle adjustment	65522-A	3
	* Denotes new parts		-	73	SCREW-hex, 12-24 x 5/B	80874	1

FIGURE 3

ALWAYS FURNISH MODEL AND SECIAL NUMBER WHEN OR DERING PARTS




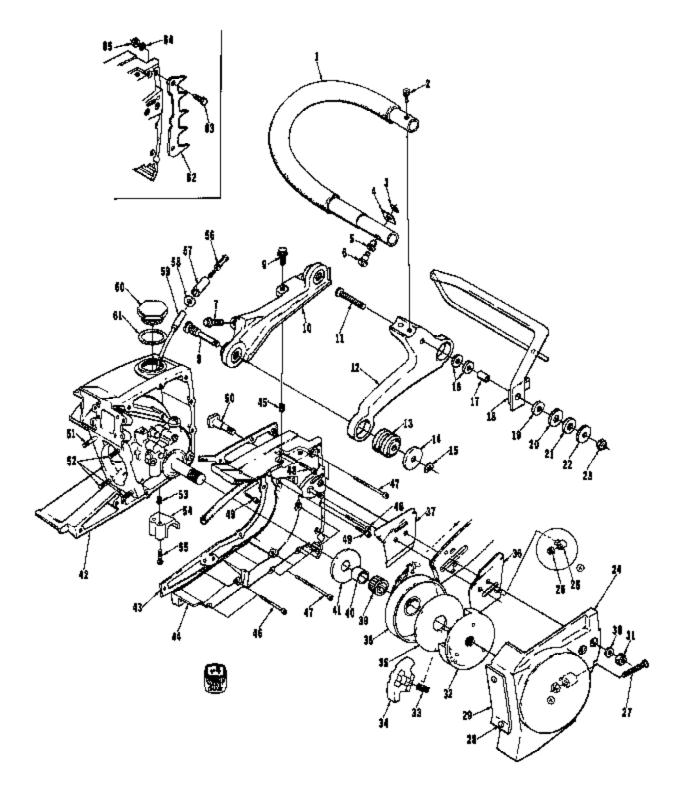


FIGURE 4

No.	Description	Part No.	Qty.	No.	Description	Part No.	Qty.
í	HANDLE BAR-flush out	A-69033-1	1		WASHER-thrust	† 68833-1	1
2	SCREW-500, 10-32 x 1	82126	1	39	BEARING-cage	54124	I
a	PLATE-handle bar	66670	1	40	RACE-loner	65985	1
4	PAD-handle bar	68394	1	41	WASHER-thrust	63860	ĩ
5	OROMMET-handle bar	85122	1	*42	CRANKCASE & TANK	A-69162	t
6	BCREW-shoulder	66338	1		Includeer		
7	SCREW-hex. 12-24 x 7/8	50891	1		PIN-dowel (not shown)	71430	2
* 8	SCREW-vibration mount	66997	2		PIN-dowel (not shown)	05385	2
	SCREW-hex, 10-32 x 5/8	80704	2		SEAL-(see fig. 2 lodes #28)	58303-A	1
*10	BRACKET-vibration mount	68992-2	1	49	GASKET-fuel tank	68864-A	1
11	SCREW-fig1, 12-24 x 1-1/2	82.223	î	44	COVER-fuel tank	A-66040	1
*12	BRACKET-handle bar	A-69164	î		Includes:		
*12	ISOLA TOR-vibration	68320	ŝ		GASKET-check valve		
		68996-1	2		(not shown)	85144	1
•14	WASHER	87857	2		CAP-check valve (not show	b) 65143	1
15	"E" RING		2	45	INSERT-taplock	72469	3
19	WASHER-fist	84006-I	1	46	BCREW-fil, 8-32 x 1-7/8	82154	3
17	BUSHING	68934-I	1	47	BCREW-111, 8-32 x 2-3/16	82155	7
18	GUARD-entl-klokback	A-68932-1	I	45	ECREW-fil, 8-32 x 1-1/4	82162	i
19	WASHER-fial	84099	-	49 69	SCREW-fil, 8-32 x 15/16	82151	2
20	WASHER-flat	48939-1	1	50	BOLT-guide bar	87183	2
21	WASHER	88935	1	51	STUD-cylinder (long)	63668	1
22	WASHER-flat	68940-1	1	51	STUD-cylinder (short]	55871	a
23	NUT- 12-24	61222	1	63	INSERT-taplock	72482	2
*24	COVER-obain	A-69090	í	54	BTOP-handle bar	87506-2	1
	Includes		_		SCREW-part, 10-32 x B/B	80572	2
25	PIN-bar adjusting	65766-1	1	55	FLTER-fuel	A-63920	ĩ
26	NUT-lock, 10-32	81211	I	56 57	Includes: FILTER-felt	64082-1	1
27	SCREW-guide bar adjusting	65175-A	1			64162	1
28	RIVET-oval head	85061	ź	58		63544	1
23	SHIELD-sawdust	64618	1	59	LDNE-fuel		î
90	WASHER-fig1, 5/18	84032	2	80	CAP-fuel filler	А-65263-В	1
91	NUT-hex, 5/10-18	81196	2		Includes		
	CLUTCH	A-64910	1	61	GASKET	68661	1
	Includes:				VALVE-check (not shown)	83718	1
32	PLA TE-clutch	64904-1	1	62	BUMPER-spiked	†A-64722	1
33	SFRING-clutch	66842	3		haludes:		_
34	SHOB-alutah	64669-3	э	63	SCREW-hex, 12-24 x 5/8	180676	2
36	COVER-clutch	63671	1	Ġ4	WASHER-lock, #12	\$ 83056	2
36	PLATE-guide bar (outer)	07299	1	65	NUT-hex, 12-24	† 8108B	2
87	PLATE-guide bar (inner)	67300	1				
*3B	SPROCKET & DRUM			* 12	enoics new parts	Optional	
	. 325 pitch, 8 tooth	A-68890	1		-		
	SPROCKET & DRUM (see note)	1A-84908	I				
	HUB & DRUM-splined	A-65968	1	NOTE:			
	SPROCKET-splined	•			63850 Thrust Washer, one (1) 8		
	3/8 pitch, 7 tooth	† OM-68210	1		one (1) 64333 Needle Bearing for	r proper assom	անկց.

FIGURE 4

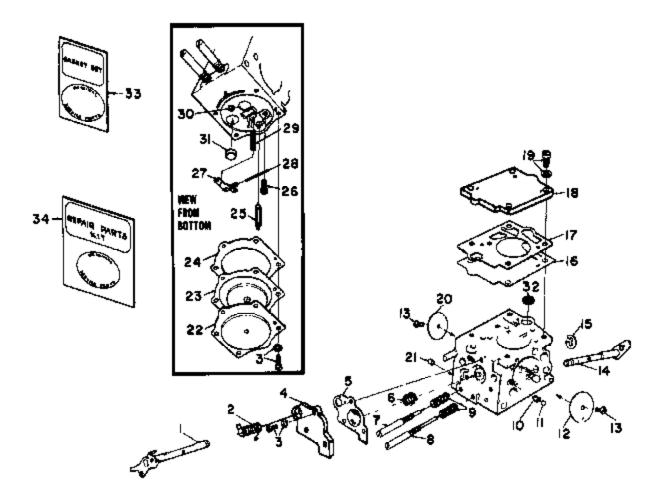

A-68402 (SDC-31)

No.	Description	Pari No.	Qíy.	No.	Description	Part No.	Qty.
1	SHAFT-throttle	64226	1	19	SCREW-fuel pump cover	64694	4
2	SPRING-throttle return	187096	1	20	VALVE-throttle	67700	1
3	SCREW ASSEMBLY	64689	7	21	PLUG-limiting	64692	2
Ŧ	COVER-gooderstor pump	67187	1	2.2	COVER-metering disphragm	64224	1
J	DIAPHRAGM-Rocelerator pump	467188	1	28	METERING DIAPHRAGM ASSEMBLY	† 642 35	1
6	BPRING-accelerator pump	164240	1	24	QASKET-metering diaphragm	\$ 64231	1
2	NEEDLE-Idle	164241	1	25	VALVE-mist needlo	1 64229	1
8	NEEDLE-high speed	†64242	1	26	SCREW-metering lever pin	104688	1
9	SPRING-needle adjusting	164286	3	27	LEVER-metering	164246	1
IŬ	SPRING-choke friction	184238	1	28	PIN-metering lever	164244	1
11	BALL-choke friction	460051	1	29	SPRING-metering lever	164287	1
12	VALVE-choke	64228	1	30	PLUG-Welch (main) 5/16	165488	1
13	SCREW-valve	† 646BJ	2	31	PLUG-Welch (idle) 3/B	4 30818	1
14	SHAFT-choks	67108	1	32	SCREEN-fuel inlet	164243	1
15	RING-throtflo shaft retaining	64221	1	33	GASKET SET	167019	1
18	DIA PHRAGM-fuol pump	† 6 42 38	1	34	REPAIR KIT	67197	1
17	CASKET-fuel pump	\$67008	1		REPAIR KIT-check valve	05368	1
18	COVER-fuel pump	\$0078	1				

† Contained in repair kits

2 Contained in gasket sets

.


Tools	
23846-2	ANVIL-roller bearing disassembly
24304	BIT-pozidriv #2
22820-6	COLLAR-bearing installation (bearing to shaft)
24173	DRIVER-check valve installation
24230	DRIVER-hand, pozidriv
A-24051	JACKSCREW- (bearing to shaft to crankcase)
24006-2	PLATE-shaft alignment
22828	PLIERS-retaining ring
A-24057	PLUG-bearing remover (back plate)
24055	PLUG-bearing & seal assembly (back plate)
A-23949	PLUG-piston pin removal
67900	Includes: "O' Ring
24054	PLUG-seal installation (crankcase)
23756	PLUG-needle bearing (connecting rod)
A-23960	PULLER-rotor removal
A-24138	REAMER-compression release
23987	SHIM-plastic (magneto air gap)
24076	SLEEVE-seal protecting (orankcase side)
23972	SLEEVE-seal installation
23136-1	SLEEVE-bearing & shaft installation
23759	SLEEVE-seal protection (back plate)
A-23934	SPANNER-clutch
23954	Includes: PIN-clutch spanner
A-23937-B	WRENCH-combination
23528	WRENCH-socket screw (connecting rod)

Accessories

68470-1	CAP-muffler (diffuser type, without shield)
65543-1	HEAT EXCHANGER
A-24460	KIT-guide bar plate
A-24273	KIT-ignition
A-24267-B	KIT-starter rope
68282	REEL-260' starter rope
A-64818	SPARK ARRESTER (reed muffler)

Paint

22772	SPRAY CAN-black
23475	SPRAY CAN-red

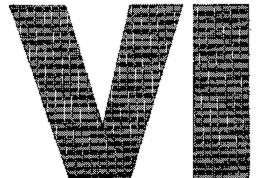

r		
L HOMEL	.ITE` j	

PORT CHESTER, NEW YORK, U.S.A. 10673